


Installation of USB-NetLink cable under Win2000

◆Step A:

To install the driver of USB-NetLink cable


Step A1.

Please insert the driver disk into your Computer and execute “**Setup.exe**” in the disk. Click “**Next**” to continue.

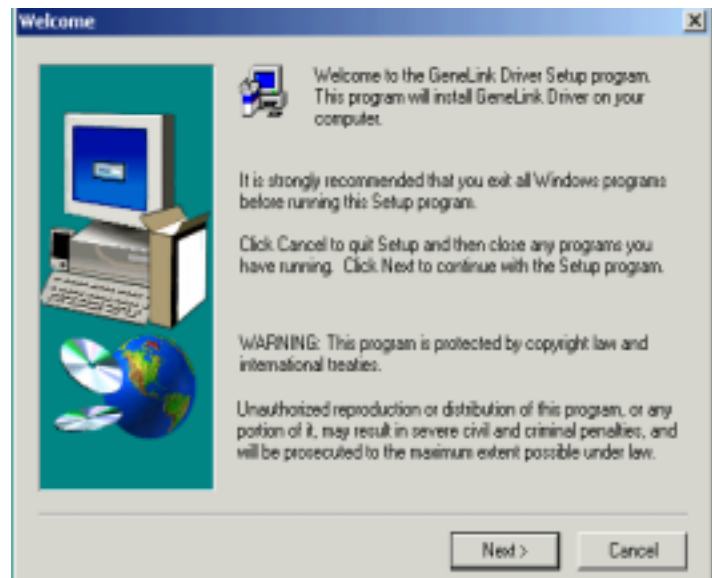

Step A2.

Click “**Next**” to continue.

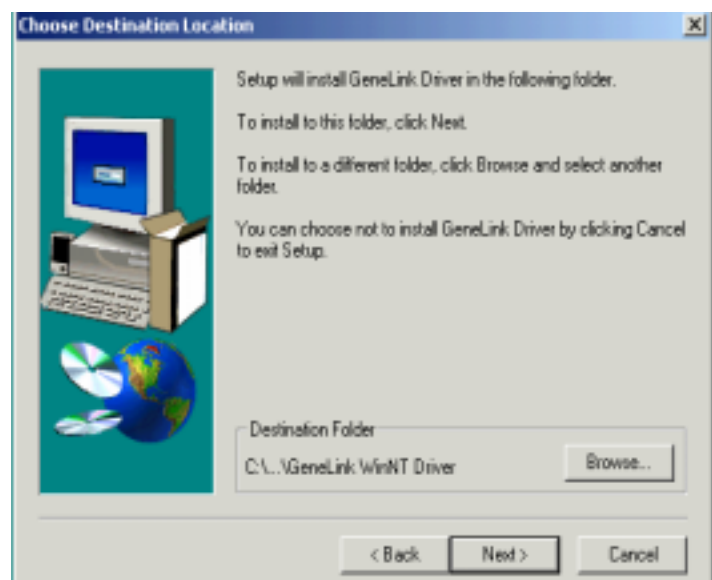

Step A3.

Select "**Software Router**". Then, click "**Next**" to continue.


Note: You cannot see this screenshot Or do not click the "**Software Router**" if the PC is Client.



Step A4.


Click "**Yes**" to continue.

Note: You cannot see this screenshot if the PC is Client.

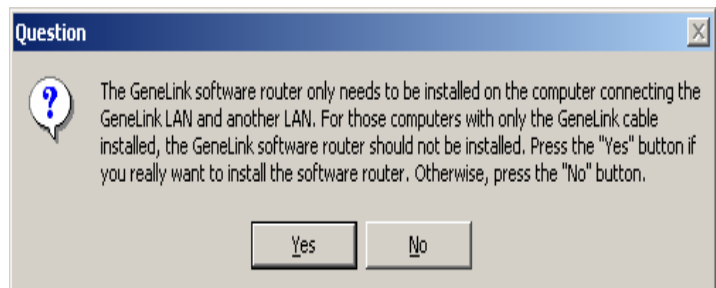


Step A5.

Click "**Yes**" to continue.

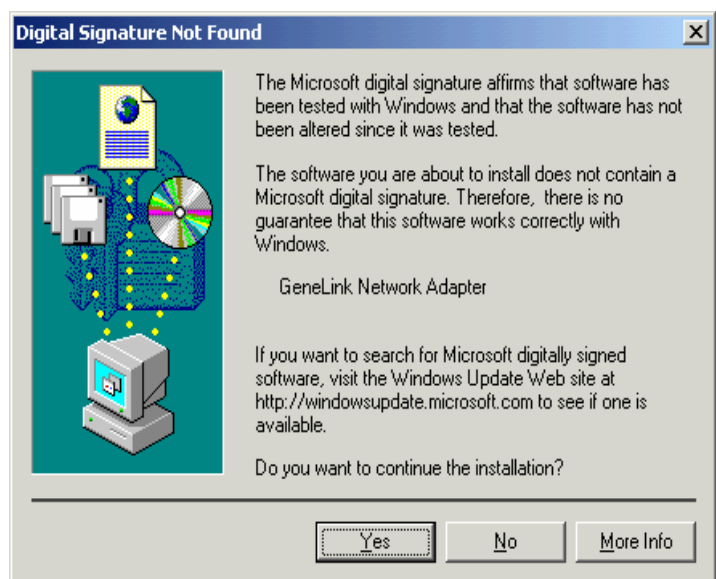


Step A6.

Plug the USB-NetLink cable into the downstream port located in the back of your computer or USB HUB port. Then, click “**OK**” to continue.

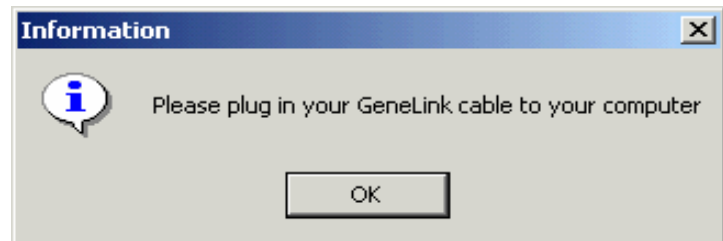


Step A7.

Click “**OK**” to continue.

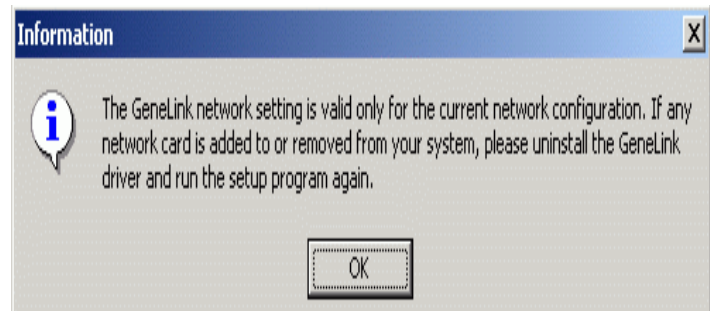


Step A8.

Select “**Yes, I want to restart my computer now**”. Then, click “**Finish**” to complete setup.

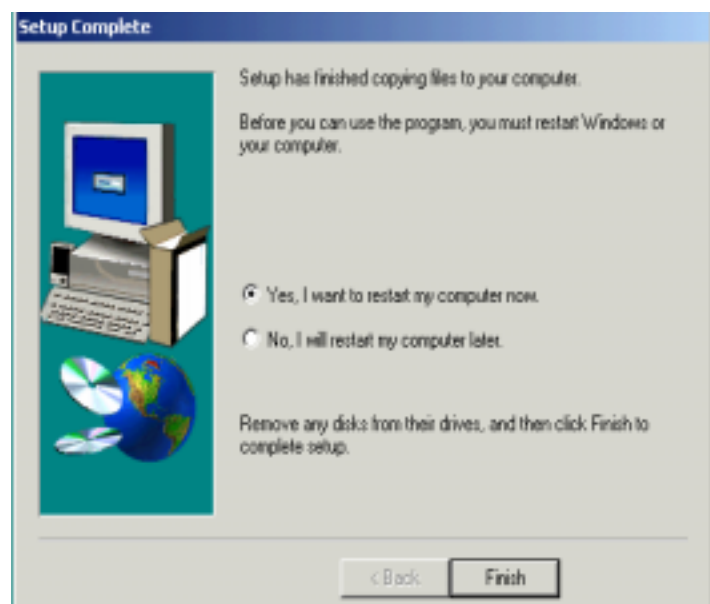


◆ **To make sure the USB-NetLink cable has installed successfully**

- (A) Please move the cursor to **“My computer”** → **“Control Panel”** → **“System”** → **“Hardware”** → **“Device Manager”**. Double click **“Network adapters”** and it will show a new direction **“GeneLink Network Adapter”**.

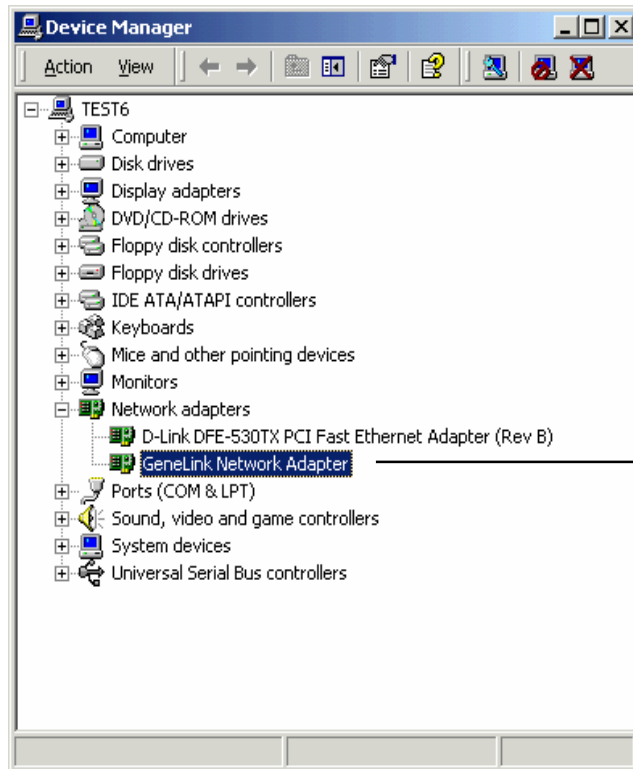

GeneLink Network Adapter.

- (B) And under the same window, double click **“Universal Serial Bus controllers”**. It will show **“GeneLink USB Adapter”**.

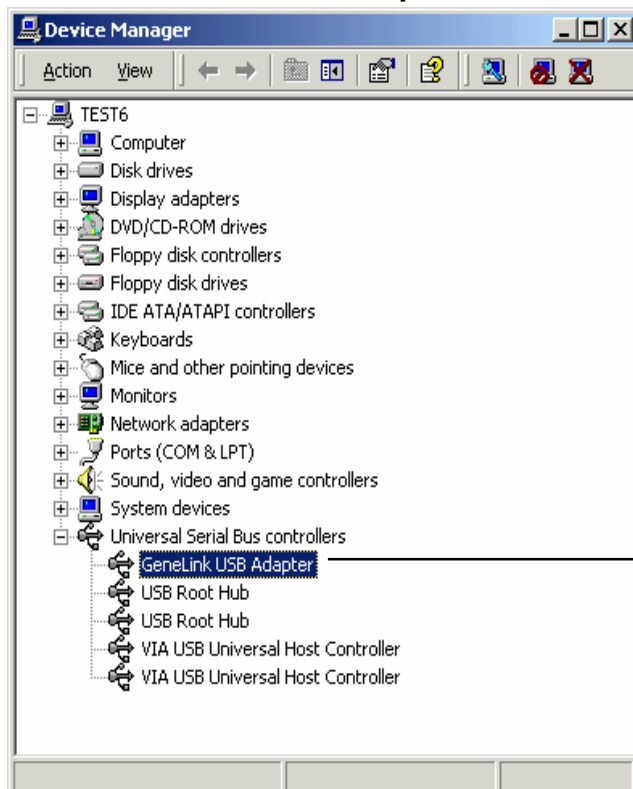

GeneLink USB Adapter

◆ Step B:


To check and to set the Network components have installed successfully

Please move the cursor to “My network places”. Click the mouse right button and select the “Properties”, you can see the “Local Area Connection”, then select “Local Area Connection2” (GeneLink Network Adapter) click the mouse right button, select “Properties” and select “General”.

When your PC is Host **Step B1.**

Please check:

1. “GeneLink Network Adapter”
 2. “GeneLink Software Router Driver”
- Click “OK” to continue.

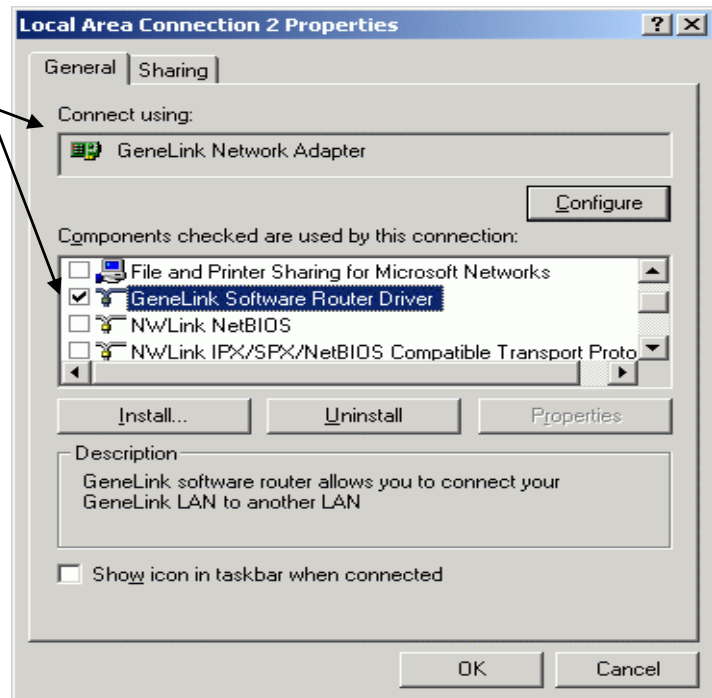


Step B2.

Select the “Local Area Connection” (Your first Network Adapter) click the mouse right button, select “Properties” and select “General”.

Please check:

1. “Your first Network Adapter”
2. “GeneLink Software Router Driver”
3. “NWLink IPX/SPX/NetBIOS Compatible Transport Protocol”

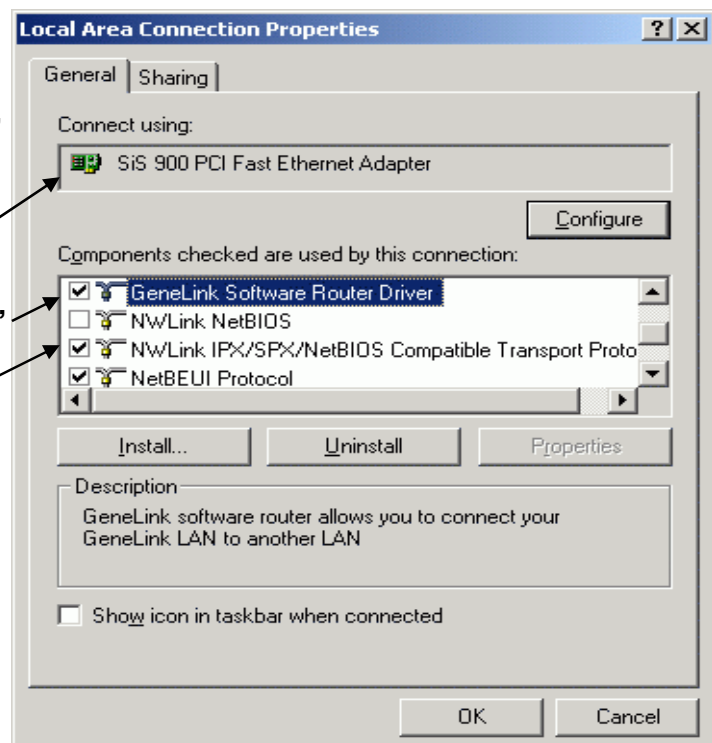


When your PC is Client

Step B3.


Please check :

1. **“GeneLink Network Adapter”**
2. **“NWLink NetBIOS”**
3. **“NWLink IPX/SPX/NetBIOS
Compatible Transport Protocol”**
4. **“Internet Protocol (TCP/IP)”**

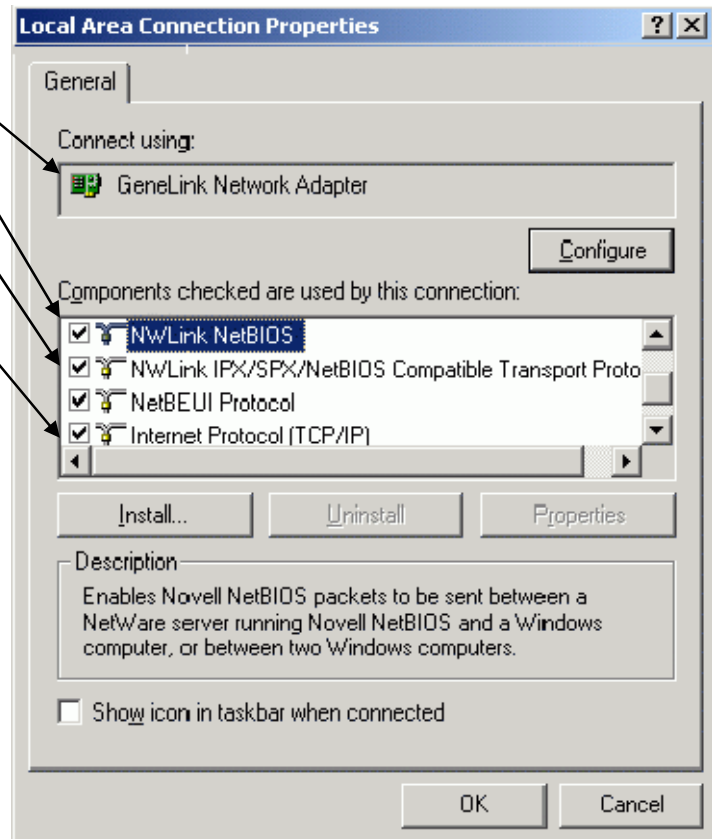


Step B4.

Please select **“Internet Protocol (TCP/IP)”** and click **“Properties”** to continue.

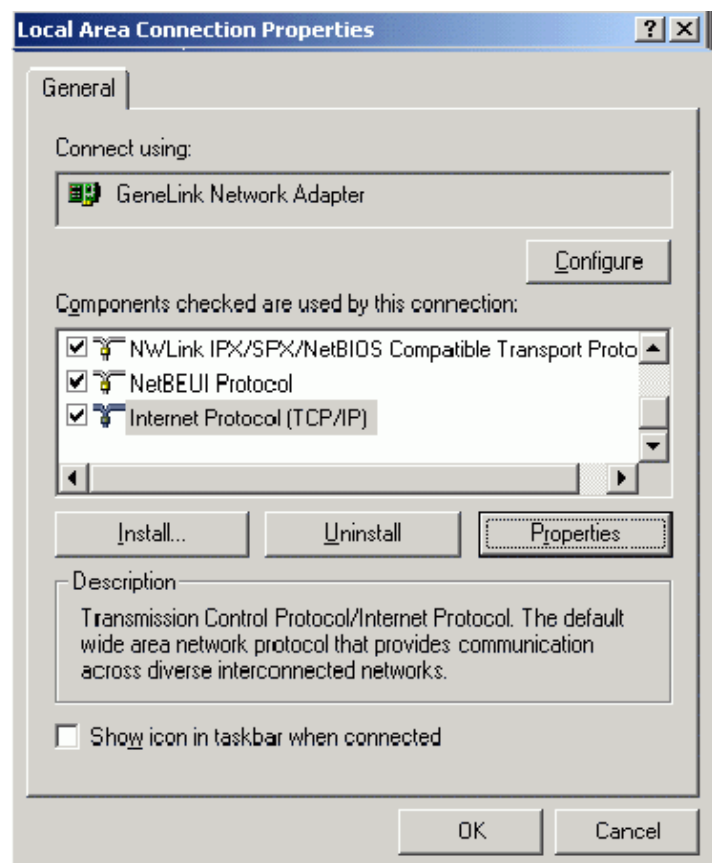

Step B5.

Select “**Obtain an IP address automatically**”, then select “**Use the following DNS sever address :**”
Fill in the numbers to “**Preferred DNS server :**” and click “**OK**” to continue.

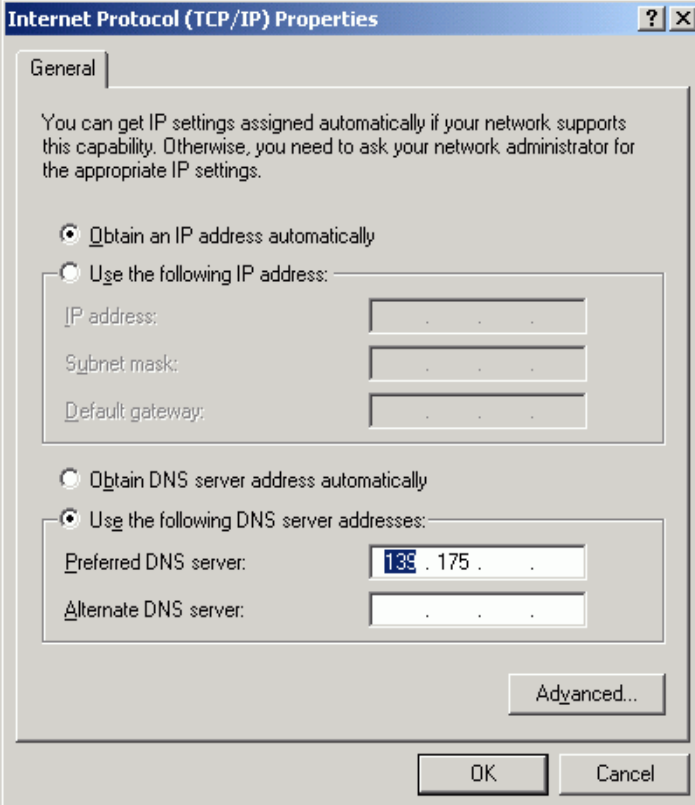


The image shows the "Internet Protocol (TCP/IP) Properties" dialog box. The "General" tab is selected. It contains instructions about automatic IP assignment. Two radio buttons are present: "Obtain an IP address automatically" (selected) and "Use the following IP address:". Below the second radio button are three text boxes for "IP address:", "Subnet mask:", and "Default gateway:". Another set of radio buttons is for DNS: "Obtain DNS server address automatically" and "Use the following DNS server addresses:". The second radio button is selected. Below it are two text boxes: "Preferred DNS server:" (containing "138.175") and "Alternate DNS server:". An "Advanced..." button is at the bottom right. "OK" and "Cancel" buttons are at the very bottom.

Step B6.

Select “**My Computer**” and click
Mouse right button → “**Properties**” →
“**Network Identification**”→“**Properties**”
It will show the “**Identification Changes**”
Please fill in the “**Computer name**” and
“**Workgroup**”.

Note: The “**Workgroup**” name must
same as the Host.

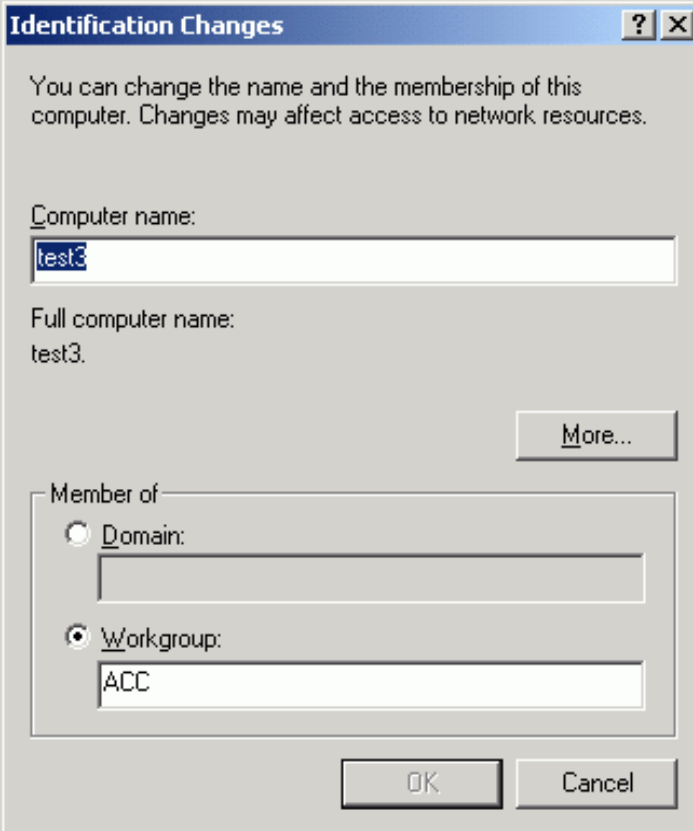


The image shows the "Identification Changes" dialog box. It contains instructions about changing the computer name and membership. There are two text boxes: "Computer name:" (containing "test3") and "Full computer name:" (containing "test3."). A "More..." button is to the right of the "Full computer name:" box. Below these is a "Member of" section with two radio buttons: "Domain:" and "Workgroup:". The "Workgroup:" radio button is selected. Below it is a text box containing "ACC". "OK" and "Cancel" buttons are at the bottom.

◆ Uninstallation

If you want to remove the driver of USB-NetLink cable, you can move the cursor to “**My computer**” → “**Control Panel**” → “**Add / Remove Programs**”.

1. Select “**GeneLink Driver**” and click “**Change/Remove**” to uninstall the driver.

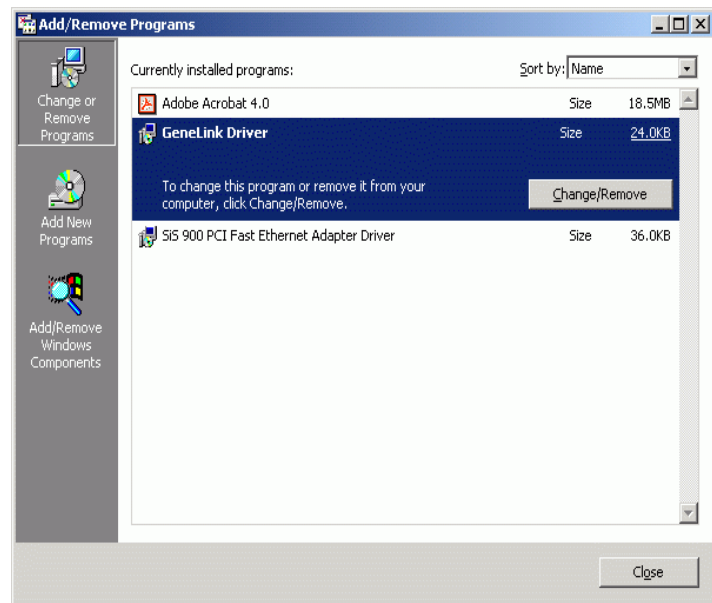

2. Click “**Yes**” to continue.



3. Click “**OK**” to complete removing the driver of USB-NetLink cable.

